




Facilis Technology, Inc. Technical Note

TN-015

Instructions for installing the TerraBlock Manager Auto Launch for Mac OS 10.2 (or 10.4 with ATTO EPCI 3300)

In order to properly display read-only or write-access in the TerraBlock Manager, Mac OS X drive permissions need to be refreshed prior to entering editing and other applications. Launching the TerraBlock Manager will refresh the permissions. The TerraBlock Manager Auto Launch application will automatically launch the Manager after a user logs in. As a result, the drive permission will be displayed correctly.

1. Make sure the Mac TerraBlock Manager folder, containing the TerraBlock Manager application, is on the desktop.
2. Locate the Utilities folder on the TerraBlock installation CD.
3. Unstuff, then place the AutoLaunchTBM application into the Applications folder in the Mac HD.
4. Under the Apple Menu, choose System Preferences, and then Accounts.
5. Select your Account and choose Startup Items.
6. Hit the "+" at the bottom of the window, and navigate to the AutoLaunchTBM in the Applications folder. Add, and leave "Hide" unchecked.
7. When this user logs in, the TerraBlock Manager will automatically launch, refreshing the drive permissions (read only or write access).

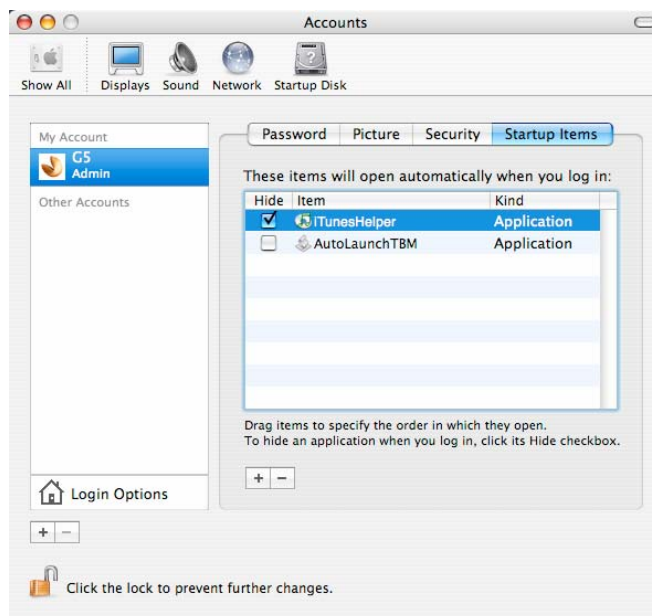

Note: If the Mac TerraBlock Manager folder or application is placed into the Applications folder of the Mac HD, the AutoLaunchTBM will fail to run. The Folder and application must be on the Desktop. Copy the Mac TerraBlock Manager from the Tools drive onto the desktop or copy from the Facilis installation CD. AutoLaunchTBM will also fail if the Tools drive is not present on the desktop.